

SOARCHO
MEDICAL TEXTILE SOLUTIONS

SOARCHO

Disposable Medical Curtains

Medical Textile Manufacturer
for Healthcare Environments



HYGIENIC
& DISPOSABLE



EASY
REPLACEMENT



SAFE
& RELIABLE



LIGHTWEIGHT
& RECYCLABLE

Creating Cleaner,
Safer Healthcare Spaces

ABOUT SOARCHO

SOARCHO is a professional manufacturer and solution provider of disposable medical curtains and medical textile products for healthcare environments worldwide.

With innovation, quality and integrity at the core of our business, we are committed to delivering safe, hygienic and reliable curtain solutions that protect patients and support healthcare professionals every day.



10+
YEARS
Industry
Experience



2,000+
m²
Modern
Production Base



50+
Skilled
Employees



60+
Countries & Regions
Served

GLOBAL SOLUTIONS, TRUSTED WORLDWIDE

Providing safe and hygienic medical curtain solutions to customers in over 60 countries and regions.



ADVANCED MANUFACTURING

Modern production facilities equipped with advanced machines to ensure high efficiency and consistent product quality.



RESEARCH & DEVELOPMENT

Dedicated R&D team continuously developing innovative products to meet the evolving needs of healthcare environments.



QUALITY CONTROL

Strict quality control system from raw materials to finished products to ensure safety, hygiene and reliable performance.



GLOBAL SUPPLY NETWORK

Strong global supply chain and reliable logistics partners to guarantee on-time delivery anywhere in the world.



PRODUCT OVERVIEW

SOARCHO disposable medical curtains are engineered for superior privacy, infection control and durability in healthcare environments.



PREMIUM & HYGIENIC

Made of 100% recyclable polypropylene (PP) nonwoven fabric, single use to reduce cross infection.



LIGHTWEIGHT & DURABLE

Lightweight yet strong, tear resistant and long-lasting for reliable daily use.



EASY REPLACEMENT

Quick to install and replace, saving time and maintenance costs.




ECO-FRIENDLY

Recyclable material helps reduce environmental impact.


FULLY EXPANDED

25%
VENTILATED
SECTION

75%
PRIVACY
SECTION

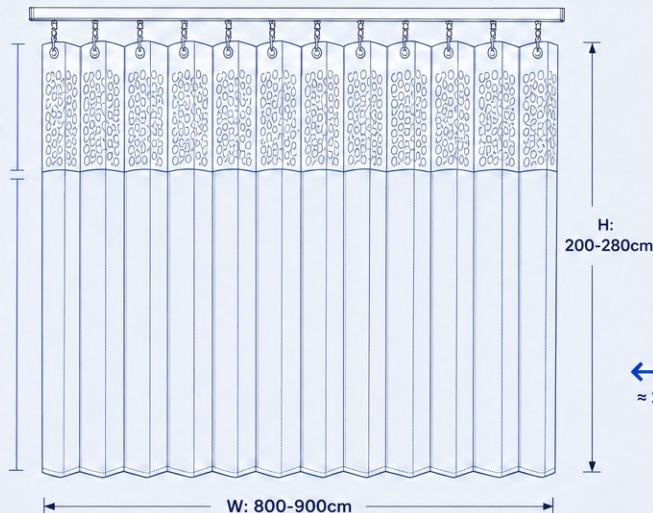

FULLY RETRACTED

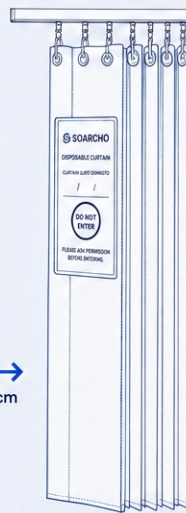


PRODUCT DETAILS



PP NONWOVEN FABRIC

Soft, breathable and fluid-resistant nonwoven material ensures comfort, privacy and excellent performance.

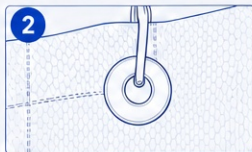

PLASTIC RING

Durable plastic rings are heat-sealed into each panel for reinforced strength and smooth movement.



METAL HOOK

Stainless steel S-hooks ensure secure hanging, corrosion resistance and easy installation.



ALUMINUM TRACK

High-quality aluminum track with smooth gliding system, strong load-bearing and long service life.



CHANGE DATE TAG

Built-in label for easy recording and tracking of curtain usage and replacement.

PRODUCT SPECIFICATIONS

SOARCHO disposable medical curtains are available in a wide range of specifications and customizable options to meet different healthcare needs.

	MATERIAL	100% Polypropylene (PP) Nonwoven
	GRAMMAGE	90g/m ² / 100g/m ² / 110g/m ²
	STANDARD SIZE	W: 150/200/250/300/350/400cm H: 180/200/220/240cm (Custom sizes available)
	COLOR	Blue (Standard) / Custom colors available
	TOP FINISH	Small Reinforced Hook Holes with Heat-sealed Hem
	FEATURES	Disposable, Hygienic, Lightweight, Flame Retardant, Antimicrobial (Optional), Recyclable
	PACKAGING	Individually folded and packed Carton packing / Custom packaging

CUSTOMIZATION OPTIONS



CUSTOM SIZE

Various width and height available



CUSTOM COLOR

Multiple color options to match your needs



ANTIMICROBIAL TREATMENT

Optional antibacterial & antifungal finish



LOGO PRINTING

Your logo can be printed on the curtain



CUSTOM PACKAGING

Various packaging solutions available

STANDARD COLORS



BLUE
(Standard)




GREEN



LIGHT BLUE



BEIGE



WHITE

* Other colors can be customized according to requirements.



APPLICATION SCENARIOS

SOARCHO disposable medical curtains are widely used in various healthcare environments to provide patient privacy, infection control and a cleaner, safer medical space.



HOSPITAL WARDS

Provide patient privacy and help reduce cross infection.



CLINICS & OUTPATIENT ROOMS

Create a clean and professional environment for examination and treatment.



NURSING HOMES & ELDERLY CARE

Disposable solution helps maintain hygiene standards and reduces laundry burden.



EMERGENCY & TRIAGE AREAS

Quick installation and replacement for dynamic and high-traffic areas.



DAY SURGERY & PROCEDURE ROOMS

Support infection control and meet strict hygiene requirements.



HOSPITAL WARDS



CLINICS & OUTPATIENT ROOMS



NURSING HOMES & ELDERLY CARE



EMERGENCY & TRIAGE AREAS



DAY SURGERY & PROCEDURE ROOMS

EASY TO REPLACE



REMOVE
Unhook the used curtain easily.



DISPOSE
Dispose of the used curtain responsibly.



INSTALL
Hang a new curtain in seconds.



READY
Instantly create a clean and hygienic space.

CERTIFICATIONS



ISO 13485:2016
Quality Management
System



ISO 9001:2015
Quality Management
System

ANTIMICROBIAL OPTION

Antimicrobial Treatment Solution

Based on customer needs, we provide antimicrobial treatment solutions, which can effectively inhibit bacterial growth, reduce cross infection risk and meet higher hygiene management requirements.

Optional antimicrobial treatment is available to inhibit bacterial growth, reduce cross infection risk and meet higher hygiene management requirements.



Inhibits Bacterial Growth

Effectively inhibits the growth of bacteria.



Reduces Cross Infection Risk

Reduces the risk of cross infection.



Meets Higher Hygiene Standards

Meets strict hygiene management requirements.



Antimicrobial function can be customized according to customer requirements, suitable for hospitals, clinics, nursing homes and other healthcare environments with high hygiene requirements.



ANTIBACTERIAL TEST REPORT
ISO 20743:2021

SGS

SGS

SGS

Test Report

NBF26-0017121-01

Date: 2026-06-22

Client Name: Soarcho Medical Technology (Ningbo) Co., Ltd

Client Address: Room 707, Huashang Building, Shenchun Road, Qingjiang District, Hua'an City, Jiangsu Province, China

Sample Name: Nonwoven Fabric: Polypropylene Material

Sample Batch No: /

Production Date: /

Manufacturer: Huarui Medical Devices (Jinhui) Co., Ltd

Supplier Name: /

Distribution of the Product(s): /

Sample other information: /

Above information and sample(s) was/were submitted and certified by the client, SGS quoted the information with no responsibility as to the accuracy, adequacy and/or completeness.

Date of Sample Received: 2026-06-11

Testing Period: 2026-06-11 ~ 2026-06-22

Test Method(s): Please refer to next page(s).

Test Result(s): Please refer to next page(s).



SGS Registered Signatory

SGS-CSTC Standards Technical Services (Ningbo) Co., Ltd.

Page 1 of 4



SGS-CSTC Standards Technical Services (Ningbo) Co., Ltd. is a member of the SGS Group (2025-2026).

Member of the SGS Group (2025-2026)

SGS

Test Report

NBF26-0017121-01

Date: 2026-06-22

Sample Description

Sample No.: /

Sample ID: /

Description: sample in bag

Test Result(s): (Selected test(s) as requested by applicant. Antimicrobial activity test

Test Method: ISO 20743:2021 (E) - Inhibition Determination of antibacterial activity of textile products. 8.1

Absorption method

Test organism(s)	Candida albicans ATCC 10231
Test medium (CFU/mL)	3.2 x 10 ⁶
F	2.6
SGS	4.3
SGS	6
SGS	1.3
SGS	1.3
Comment	Strong Effect
Antibacterial activity(%)**	>99.9

Test organism(s)	Escherichia coli ATCC 8739
Test medium (CFU/mL)	3.2 x 10 ⁶
F	3.3
SGS	4.9
SGS	4.7
SGS	1.3
SGS	1.3
Comment	Strong Effect
Antibacterial activity(%)**	>99.9

Test organism(s)	Staphylococcus aureus ATCC 6538
Test medium (CFU/mL)	3.2 x 10 ⁶
F	2.6
SGS	7.7
SGS	4.6
SGS	0
SGS	1.3
SGS	1.3
Comment	Strong Effect
Antibacterial activity(%)**	>99.9

SGS-CSTC Standards Technical Services (Ningbo) Co., Ltd.

Page 2 of 4



SGS-CSTC Standards Technical Services (Ningbo) Co., Ltd. is a member of the SGS Group (2025-2026).

Member of the SGS Group (2025-2026)



Professional Production
Strict Quality Control

FIRE RETARDANT OPTION

Fire Retardant Disposable Medical Curtain Solution

We provide fire retardant disposable medical curtains that meet the safety requirements of healthcare institutions and public areas, effectively reducing fire risks and ensuring personnel safety.



FIRE SAFETY
Flame retardant
performance for
enhanced safety.



**COMPLY WITH
EN 13772**
Meet the standard
requirements.



**PROTECT LIFE
AND PROPERTY**
Reduce fire risk
and protect safety.

FIRE SAFETY YOU CAN TRUST

Our fire retardant curtains help
create a safer environment
for patients, staff and visitors.



Flame Retardant Nonwoven
Inherently flame retardant
material.



EN 13772 Vertical Flame Test
In accordance with
EN 13772 standard.



Professional Testing
Strict testing to ensure
reliable performance.



Certified Safety
Tested by SGS,
quality assured.

- ✓ Suitable for hospitals, clinics,
nursing homes and other places.
- ✓ Effectively reduces fire risk.
- ✓ Ensures personnel and
public safety.



FIRE RETARDANT TEST REPORT EN 13772:2011

SGS

Test Report SL626632727681TX

Date: June 16, 2026 Page 1 of 3

SOARCHO MEDICAL TECHNOLOGY (HUAI AN) CO., LTD
ROOM 710, HANGHANG BUILDING, SHENZHEN ROAD, QINGJIANGPU DISTRICT, HUAI AN CITY,
JIANGSU PROVINCE, CHINA

The following sample(s) was/were submitted and identified on behalf of the client as:
Sample Description : (A)Nonwoven fabric; (Nonwoven Fabric; Polypropylene Material for Disposable
Curtains)

End Use : (A)Antimicrobial and Flame-Retardant Disposable Nonwoven Cubicle Curtain
Manufacturer : Huai An Medical Devices (Jinhui) Co., Ltd

Sample Receiving Date : Jun 10, 2026

Testing Period : Jun 10, 2026 - Jun 16, 2026

Test Result(s) : Unless otherwise stated the results shown in this test report refer only to the
sample(s) tested; for further details, please refer to the following page(s).

Test Performed : Selected test(s) as requested by applicant

A Remark

Conclusion :

Textiles and Textile Products :

Burning Behaviour - Curtains and

Drapes - Measurement of Flame

Spread of vertically oriented

Specimens with Large Ignition

Source

See Results

Signed for and on behalf of:
SGS-CTIC Technical Services Co., Ltd. Hangzhou Branch

Jacky Chen

jacky.chen@account.executive.sgsgroup.com



SGS-CTIC Technical Services Co., Ltd. Hangzhou Branch
Address: Room 710, Hanghang Building, Shenzhen Road, Qingjiangpu District, Huai An City, Jiangsu Province, China
Tel: +86 (0)512 83551111 Fax: +86 (0)512 83551112 Email: sgsgroup.com.cn
Member of the SGS Group (2023-24)

SGS

Test Report SL626632727681TX

Date: June 16, 2026 Page 2 of 3

Test Result

Textiles and textile products — Burning behaviour — Curtains and drapes — Measurement of flame
spread
EN 13772:2011

Sample A

As received

Specimen	Lengthwise			Widthwise		
	100mm	200mm	300mm	100mm	200mm	300mm
T1 untreated (1/1N)	N	N	N	N	N	N
T2 untreated (1/1N)	N	N	N	N	N	N
T3 untreated (1/1N)	N	N	N	N	N	N
T4 untreated (1/1N)	N	N	N	N	N	N
T5 untreated (1/1N)	N	N	N	N	N	N
T6 untreated (1/1N)	N	N	N	N	N	N
T7 untreated (1/1N)	N	N	N	N	N	N
T8 untreated (1/1N)	N	N	N	N	N	N
T9 untreated (1/1N)	N	N	N	N	N	N
T10 untreated (1/1N)	N	N	N	N	N	N
T11 untreated (1/1N)	N	N	N	N	N	N
T12 untreated (1/1N)	N	N	N	N	N	N
T13 untreated (1/1N)	N	N	N	N	N	N
T14 untreated (1/1N)	N	N	N	N	N	N
T15 untreated (1/1N)	N	N	N	N	N	N
T16 untreated (1/1N)	N	N	N	N	N	N
T17 untreated (1/1N)	N	N	N	N	N	N
T18 untreated (1/1N)	N	N	N	N	N	N
T19 untreated (1/1N)	N	N	N	N	N	N
T20 untreated (1/1N)	N	N	N	N	N	N
T21 untreated (1/1N)	N	N	N	N	N	N
T22 untreated (1/1N)	N	N	N	N	N	N
T23 untreated (1/1N)	N	N	N	N	N	N
T24 untreated (1/1N)	N	N	N	N	N	N
T25 untreated (1/1N)	N	N	N	N	N	N
T26 untreated (1/1N)	N	N	N	N	N	N
T27 untreated (1/1N)	N	N	N	N	N	N
T28 untreated (1/1N)	N	N	N	N	N	N
T29 untreated (1/1N)	N	N	N	N	N	N
T30 untreated (1/1N)	N	N	N	N	N	N
T31 untreated (1/1N)	N	N	N	N	N	N
T32 untreated (1/1N)	N	N	N	N	N	N
T33 untreated (1/1N)	N	N	N	N	N	N
T34 untreated (1/1N)	N	N	N	N	N	N
T35 untreated (1/1N)	N	N	N	N	N	N
T36 untreated (1/1N)	N	N	N	N	N	N
T37 untreated (1/1N)	N	N	N	N	N	N
T38 untreated (1/1N)	N	N	N	N	N	N
T39 untreated (1/1N)	N	N	N	N	N	N
T40 untreated (1/1N)	N	N	N	N	N	N
T41 untreated (1/1N)	N	N	N	N	N	N
T42 untreated (1/1N)	N	N	N	N	N	N
T43 untreated (1/1N)	N	N	N	N	N	N
T44 untreated (1/1N)	N	N	N	N	N	N
T45 untreated (1/1N)	N	N	N	N	N	N
T46 untreated (1/1N)	N	N	N	N	N	N
T47 untreated (1/1N)	N	N	N	N	N	N
T48 untreated (1/1N)	N	N	N	N	N	N
T49 untreated (1/1N)	N	N	N	N	N	N
T50 untreated (1/1N)	N	N	N	N	N	N
T51 untreated (1/1N)	N	N	N	N	N	N
T52 untreated (1/1N)	N	N	N	N	N	N
T53 untreated (1/1N)	N	N	N	N	N	N
T54 untreated (1/1N)	N	N	N	N	N	N
T55 untreated (1/1N)	N	N	N	N	N	N
T56 untreated (1/1N)	N	N	N	N	N	N
T57 untreated (1/1N)	N	N	N	N	N	N
T58 untreated (1/1N)	N	N	N	N	N	N
T59 untreated (1/1N)	N	N	N	N	N	N
T60 untreated (1/1N)	N	N	N	N	N	N
T61 untreated (1/1N)	N	N	N	N	N	N
T62 untreated (1/1N)	N	N	N	N	N	N
T63 untreated (1/1N)	N	N	N	N	N	N
T64 untreated (1/1N)	N	N	N	N	N	N
T65 untreated (1/1N)	N	N	N	N	N	N
T66 untreated (1/1N)	N	N	N	N	N	N
T67 untreated (1/1N)	N	N	N	N	N	N
T68 untreated (1/1N)	N	N	N	N	N	N
T69 untreated (1/1N)	N	N	N	N	N	N
T70 untreated (1/1N)	N	N	N	N	N	N
T71 untreated (1/1N)	N	N	N	N	N	N
T72 untreated (1/1N)	N	N	N	N	N	N
T73 untreated (1/1N)	N	N	N	N	N	N
T74 untreated (1/1N)	N	N	N	N	N	N
T75 untreated (1/1N)	N	N	N	N	N	N
T76 untreated (1/1N)	N	N	N	N	N	N
T77 untreated (1/1N)	N	N	N	N	N	N
T78 untreated (1/1N)	N	N	N	N	N	N
T79 untreated (1/1N)	N	N	N	N	N	N
T80 untreated (1/1N)	N	N	N	N	N	N
T81 untreated (1/1N)	N	N	N	N	N	N
T82 untreated (1/1N)	N	N	N	N	N	N
T83 untreated (1/1N)	N	N	N	N	N	N
T84 untreated (1/1N)	N	N	N	N	N	N
T85 untreated (1/1N)	N	N	N	N	N	N
T86 untreated (1/1N)	N	N	N	N	N	N
T87 untreated (1/1N)	N	N	N	N	N	N
T88 untreated (1/1N)	N	N	N	N	N	N
T89 untreated (1/1N)	N	N	N	N	N	N
T90 untreated (1/1N)	N	N	N	N	N	N
T91 untreated (1/1N)	N	N	N	N	N	N
T92 untreated (1/1N)	N	N	N	N	N	N
T93 untreated (1/1N)	N	N	N	N	N	N
T94 untreated (1/1N)	N	N	N	N	N	N
T95 untreated (1/1N)	N	N	N	N	N	N
T96 untreated (1/1N)	N	N	N	N	N	N
T97 untreated (1/1N)	N	N	N	N	N	N
T98 untreated (1/1N)	N	N	N	N	N	N
T99 untreated (1/1N)	N	N	N	N	N	N
T100 untreated (1/1N)	N	N	N	N	N	N

Remark

T1 From the start of the application of the igniting flame to the severance of the first marker thread (240mm)

T2 From the start of the application of the igniting flame to the severance of the second marker thread (200mm)

T3 From the start of the application of the igniting flame to the severance of the third marker thread (240mm)

File

No

Burner ignition location: Bottom edge ignition

Ignition time: 10s

Gas used: Propane

* The test was carried out by SGS Shanghai Laboratory



SGS-CTIC Technical Services Co., Ltd. Hangzhou Branch
Address: Room 710, Hanghang Building, Shenzhen Road, Qingjiangpu District, Huai An City, Jiangsu Province, China
Tel: +86 (0)512 83551111 Fax: +86 (0)512 83551112 Email: sgsgroup.com.cn
Member of the SGS Group (2023-24)

MATERIALS & MANUFACTURING

Premium Materials & Advanced Production

We select premium raw materials and adopt advanced production processes with strict quality control systems to ensure stable quality and reliable performance of every curtain.

PREMIUM MATERIALS



100% Polypropylene (PP) Nonwoven Fabric
High-quality medical-grade nonwoven material with excellent durability and privacy performance.



Custom GSM Available
90g/m² • 100g/m² • 110g/m²



Breathable & Lightweight
Comfortable material with excellent air permeability.



Excellent Tear Resistance
Enhanced durability for daily healthcare environments.



Recyclable & Eco-friendly
Environmentally responsible polypropylene material.



ADVANCED MANUFACTURING PROCESS



Raw Material Inspection

Strict inspection of each batch of raw materials to ensure quality standards.



Nonwoven Production

Advanced equipment ensures uniformity and stability of nonwoven fabric.



Cutting & Folding

Precise cutting and automatic folding ensure consistent size and neat appearance.



Hook Hole Installation

Heat-pressed hook holes with reinforced treatment for enhanced durability.



Quality Inspection

Multi-step quality inspection to ensure each product meets customer requirements.



Packaging & Shipping

Individually packed and carton packed. Customized packaging available.



Strict Quality Control System
Ensuring stable and reliable product quality.



Advanced Production Equipment
Modern manufacturing lines for efficient production.



Professional Production Team
Experienced technicians and skilled workers.



Stable Capacity & On-time Delivery
Reliable supply capability for global customers.

COLORS & PATTERNS SELECTION


Color & Pattern Selection

We provide a wide range of standard colors and printed patterns, and support custom colors and designs to meet the diverse needs of various healthcare environments.

STANDARD COLORS



Blue

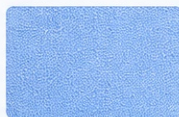


Sky Blue



Green



Mint Green



White



Grey



Beige



Pink



Purple



Customized Colors

* Due to different monitor settings, actual colors may vary slightly.

PRINTED DESIGNS


A variety of printed designs for pediatric wards and healthcare space decoration.




Teddy Bears




Stars & Moons



Animal Friends




Forest Deer



Ocean World



Space Adventure



Rainbow Sky



Dinosaur World




Hot Air Balloons



Cars & Traffic



Cute Cats



Puppy Friends




Floral Pattern



Geometric Shapes



Polka Dots



Alphabet World



Multiple Color Options

A wide range of standard colors and custom colors.



High-definition Printing

Advanced printing technology for clear and vibrant patterns.



Custom Designs Supported

Support for custom colors and pattern designs.



Safe & Eco-friendly Printing

Environmentally friendly inks, safe and non-toxic.



Ideal for Pediatric Environment

Bright and friendly designs create a comfortable space.

APPLICATION SCENARIOS

Application Scenarios

SOARCHO disposable medical curtains are suitable for a wide range of application scenarios, providing effective privacy protection, infection control and efficient space management solutions.

SOARCHO disposable medical curtains are widely used in various healthcare environments to provide privacy protection, infection control and efficient space management.



Hospital Wards

Protect patient privacy and improve care experience.



ICU

Effective isolation, reduces the risk of cross infection.



Isolation Rooms

Strict isolation, ensures safety and hygiene.



Emergency Departments

Quick deployment for high-traffic environments.



Nursing Homes

Keep environment clean and reduce laundry burden.



Clinics

Create a professional environment and increase patient trust.



Pediatric Wards

Various prints available to soothe children's emotions.



Multi-purpose Areas

Suitable for temporary partitions and space optimization.



Enhance Privacy Protection



Strengthen Infection Control



Quick Replacement & Deployment



Reduce Operational Costs



Eco-friendly & Sustainable



Compliant with Medical Standards

CERTIFICATIONS & TEST REPORTS

Quality Assurance & Compliance

We strictly implement international quality management systems to ensure our products meet healthcare industry standards. Our disposable medical curtains have passed multiple authoritative certifications and laboratory tests, providing safe, reliable, and high-quality solutions for healthcare environments.

ISO 13485 Quality Management System Certificate



Certificate of Registration

ISO 9001 Quality Management System Certificate



Certificate of Registration

ISO 20743 Antibacterial Test Report



Report No.: ISO 20743

EN 13772 Fire Retardant Test Report



Report No.: EN 13772

OUR QUALIFICATIONS



MEDICAL DEVICE
Production License



ISO 50001
Energy Management
System Certificate



AAA CREDIT
Credit-Keeping Contract
Compliance Enterprise



AAA CREDIT
Enterprise Credit
Rating Certificate



AAA CREDIT
Honoring Contracts
and Keeping Promises

PROFESSIONAL PRODUCTION • STRICT QUALITY CONTROL

Advanced manufacturing facilities and comprehensive quality control procedures ensure consistent product quality and reliable performance.



Authoritative Certification
Certified by recognized
international organizations.



Strict Testing
Products undergo
comprehensive laboratory
testing.



Reliable Quality
Stable quality management
throughout production.



Safe & Assured
Designed to meet
healthcare industry
requirements.



Certificate Holder:
Jinhu Huarui Medical Devices Co., Ltd.

SOARCHO Medical Textile Products Manufacturing Entity
All certifications, test reports, and quality documents displayed
in this catalog are held by the manufacturing facility
responsible for the production and quality management of
SOARCHO products.

CONTACT US

SOARCHO

Medical Textile Manufacturer



Website

www.soarchomedical.com



Email

soarchomedical@gmail.com



WhatsApp / WhatsApp

+86 189 5126 121



Sales Office

Room 707, Huaishang Building,
Shenzhen Road, Hua'an, Jiangsu, China

Factory Address

Huarui Medical, Dailou Industrial Cluster,
Jinhu County, Hua'an, Jiangsu, China

WHY WORK WITH SOARCHO?



Factory Direct

Competitive pricing with stable quality.
Source factory, cost-effective,
and reliable quality.



OEM & ODM Services

Support OEM & ODM customization.
Professional design team to support
your brand.



Fast Delivery

Efficient production and fast lead time.
On-time delivery, reliable and trustworthy.



Free Samples Available

Support free samples
for quality evaluation.
See the quality, trust the product.



Global Shipping

Reliable logistics partners worldwide.
Safe packaging and on-time delivery.



Advanced Production Equipment



Professional Production Team



Safe Packaging & Storage



Request Catalog

View our product catalog
and product information.
Learn more about our products.



Get Free Sample

Experience our product
quality firsthand.
Experience our product quality.



Send Inquiry

Tell us your needs.
Quick response to
your needs.



Scan QR Code
to Contact Us
via WhatsApp